


# PRE5003e ecostat Touch Adjust 3 Stage Infra-red Settable Intelligent Thermostat With User Adjust

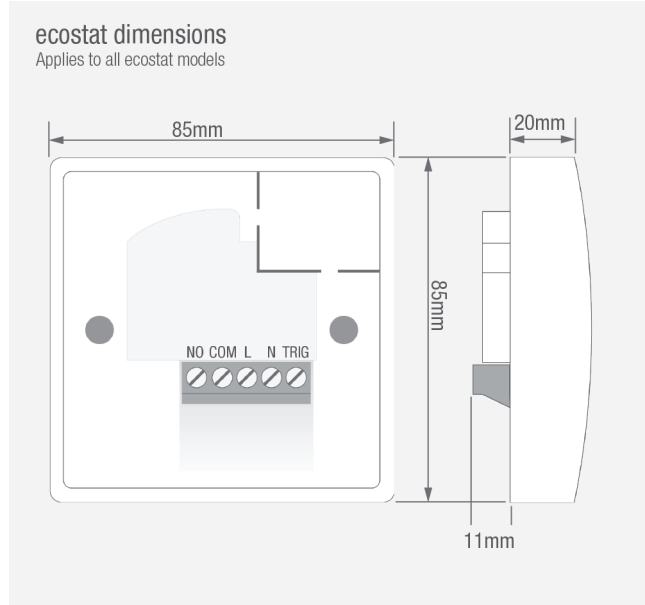

## Specification:

**SIZE:** Standard single gang plate size. Requires a 30mm or larger surface pattress or 25mm or greater sunken box. When mounting into a sunken wall box or metal clad box remove the top and bottom mounting lugs of the box.

**SUPPLY VOLTAGE:** 220-240V AC at 50hZ.

**LOAD:** 16A Resistive, not suitable for use with quartz heaters.

**ELECTRICAL CONNECTIONS:** Live in (L), Neutral (N), Common (C), Normally Open (NO), 230V AC 50hZ Boost Trigger (TRIG).

**TERMINAL CAPACITY:** 4mm<sup>2</sup> Maximum

**INDICATORS:** Heating active, Frost, Setback, Boost Min, Boost mid, Boost Max.

**ADJUSTMENT:** Program selection with temperature adjustment, button selected.

**PROGRAMS:** Boost, Setback, Frost.

**TIMING RANGE:** Boost 5-999 minutes, Setback 5 minutes to 999 hours.

**TEMPERATURE RANGE:** Boost, Setback and Frost 1-30°C.

**PROGRAMMING METHOD:** AUTO LOCK SYSTEM © Secure Infra-red programming via the PRE5901.

**CONFORMANCE:** EMC-2004/108/EC LVD-2006/95/EC

**ERP CLASS:** ErP class 1, SHE 1%

**CASING MATERIAL:** ABS


**TEMPERATURE ACCURACY:** +/- 0.5°C

## Installation:

- All installation and wiring works must be completed by a competent person and conform to current regulations in-force at time of installation.
- Locate the thermostat at least 300mm away from the nearest edge of the heater. Ensure the thermostat is placed where it cannot be affected by extraneous heat sources, for example: televisions, desktop computers, fridges. If fitted too close to an extraneous heat source the thermostat will not function correctly. Mount the thermostat at the centre point of the room if possible. Do not mount the thermostat behind curtains or room dividers.
- Ensure the thermostat has a local means of safe isolation. A double pole isolator must be used.
- Mount the thermostat at 1.2m from finished floor level.
- The thermostat can be mounted in both surface and sunken boxes. When mounting into a metal clad pattress or sunken box the upper and lower lugs must be removed.
- Ensure the thermostat is not mounted within 1m of forced heating or ventilation systems.

.....

## Typical layout:

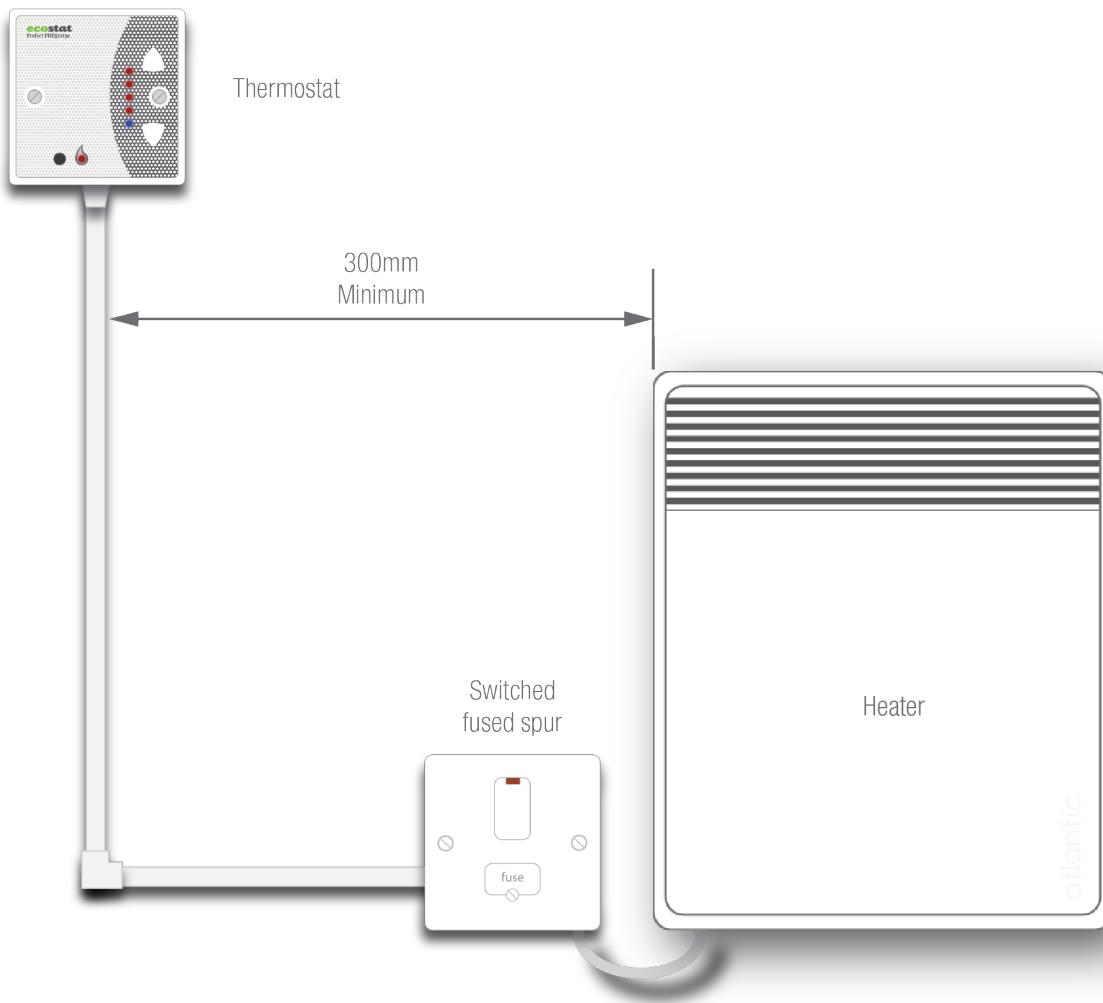


Wiring:

Mains output

1. Isolate the appropriate circuit that the thermostat is to be supplied from. Perform safe isolation procedure to ensure the circuit is completely isolated. Ensure the supply has been locked in the off position. Always ensure safe working practices.
2. Make any circuit adjustments required in accordance with current regulations.
3. If the trigger terminal is to be used ensure the trigger supply is fed from the same circuit as the thermostat supply to conform with current regulations.
4. Connect the live and neutral supply to the thermostat, note that the load neutral must be fitted with the supply neutral. Ensure the supplied mains link is fitted between L and COM terminals, terminate the loads live supply to the normally open (NO) terminal. Ensure the link is securely fastened in both the L and COM terminals.
5. Recheck all terminal including any factory fitted connections and fit unit to back box ensuring cables are not in a position to be damaged.
6. Re-energise the circuit. Press the up button twice to enable a 2 minute test cycle.

Volt free output


1. Isolate the appropriate circuit that the thermostat is to be supplied from. Perform safe isolation procedure to ensure the circuit is completely isolated. Ensure the supply has been locked in the off position. Always ensure safe working practices.
2. Make any circuit adjustments required in accordance with current regulations.
3. If the trigger terminal is to be used ensure the trigger supply is fed from the same circuit as the thermostat supply to conform with current regulations.
4. Terminate the live and neutral supply to the thermostat. Ensure the supplied mains link is removed.
5. Terminate the loads feed cable to the common (COM) terminal. Terminate the load return to normally open (NO) terminal.
6. Recheck all terminal connections and fit unit to back box ensuring cables are not in a position to be damaged.
7. Re-energise the circuit. Press the up button twice to enable a 2 minute test cycle.

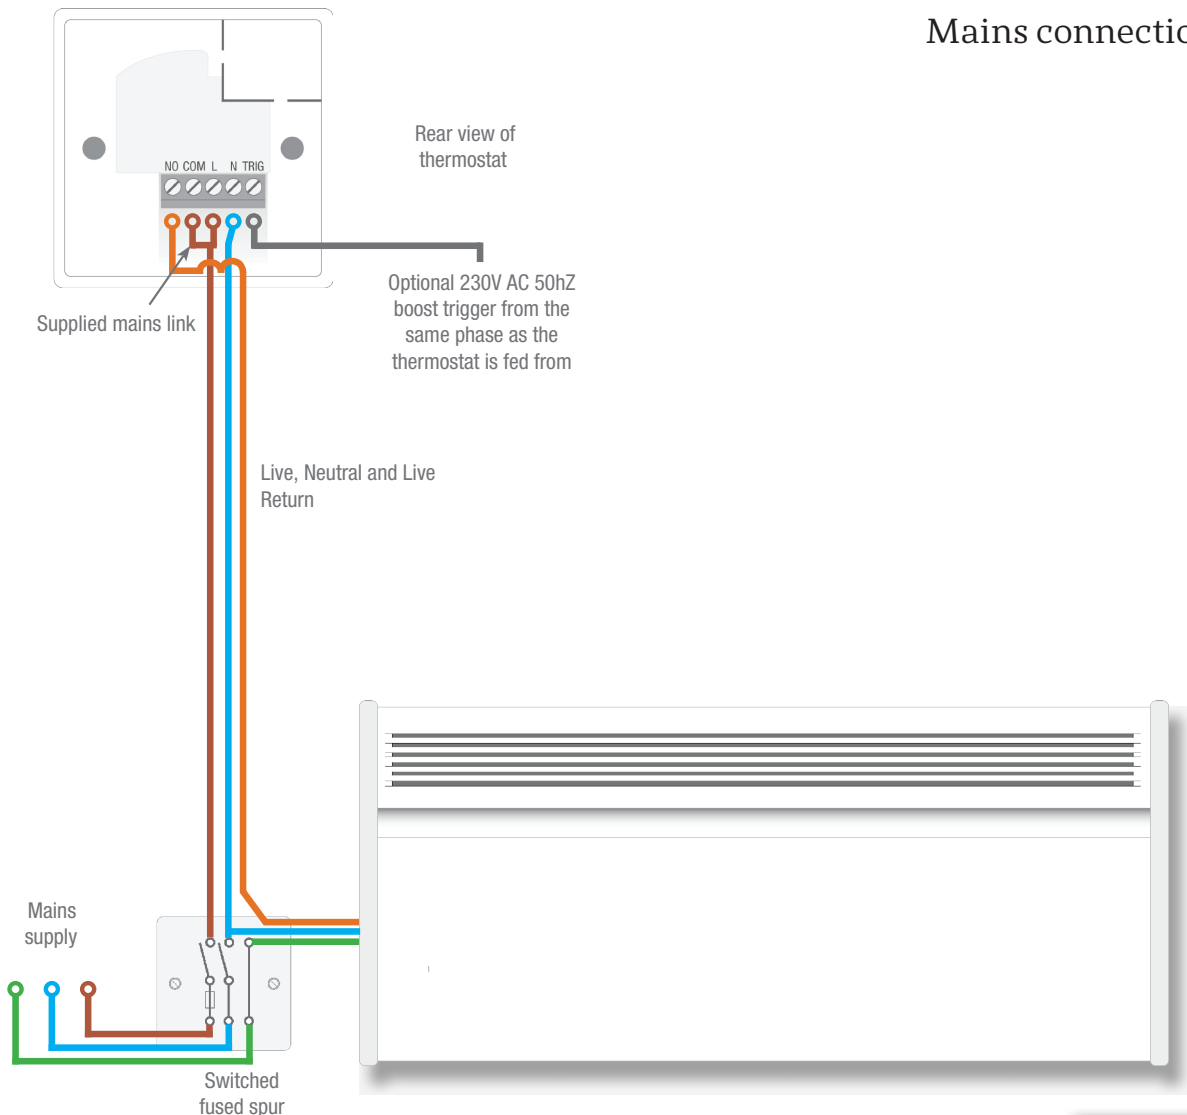


Mains connection



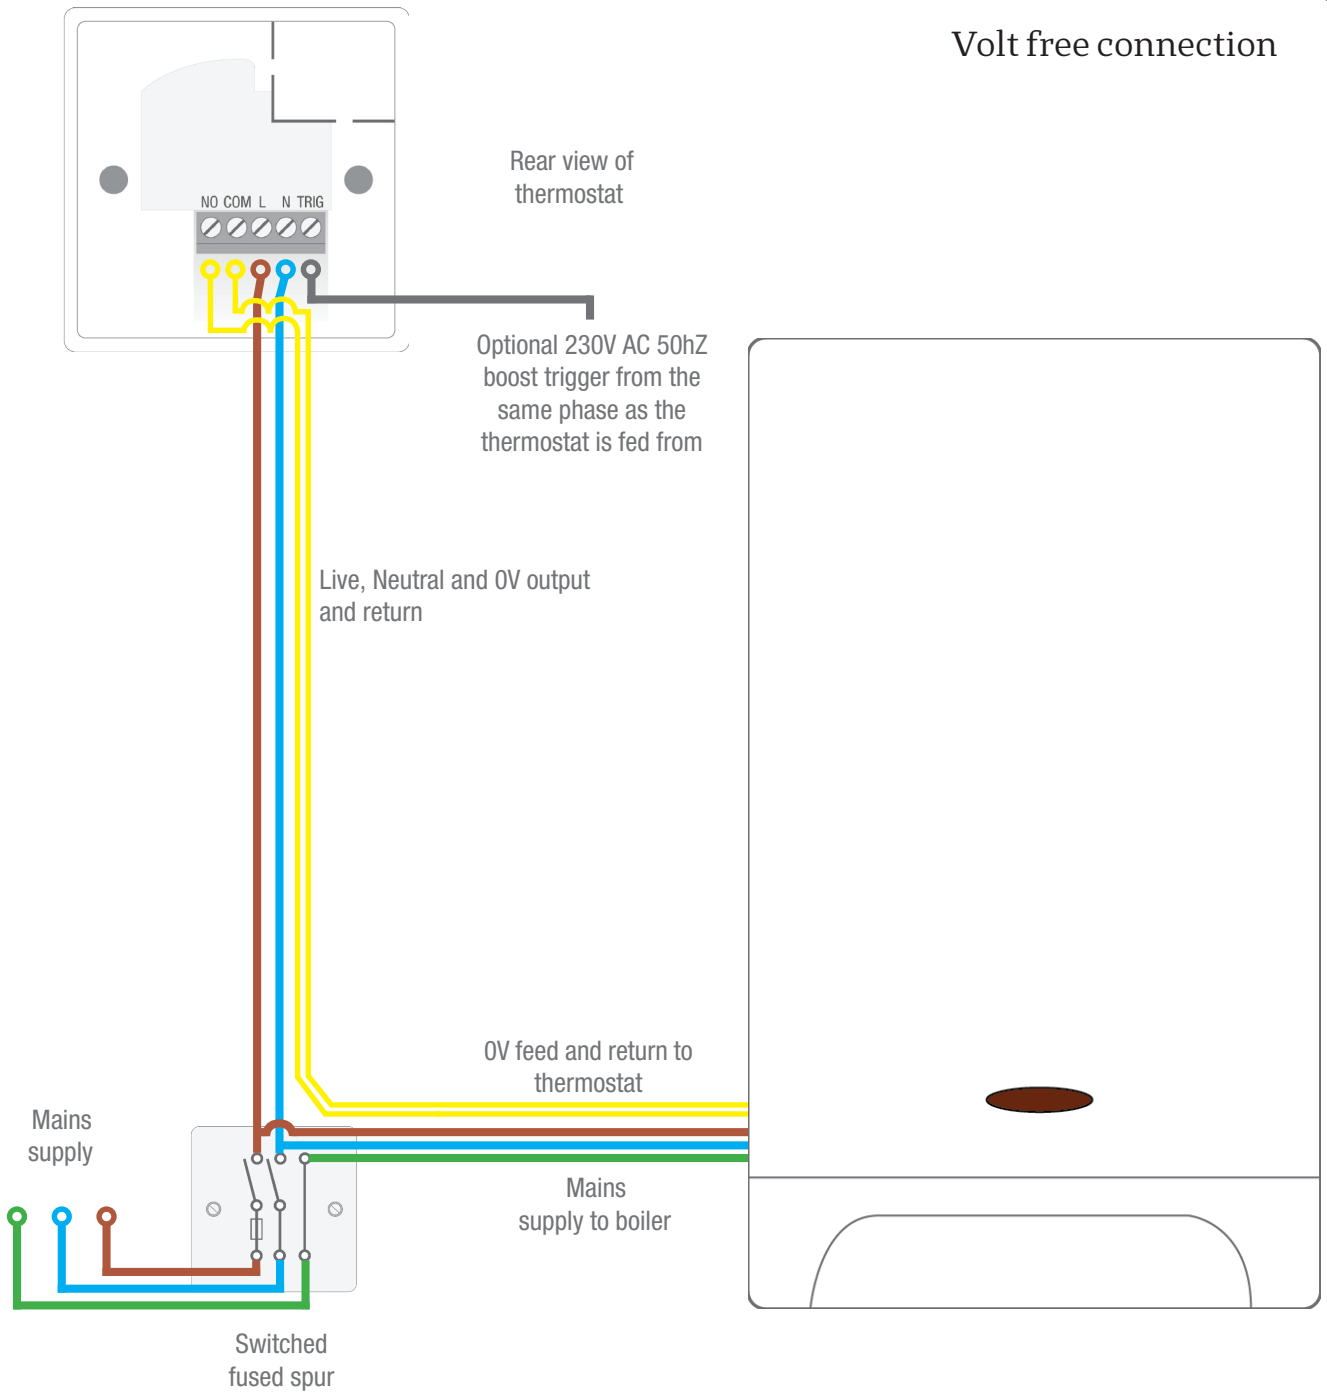

### Volt free connection

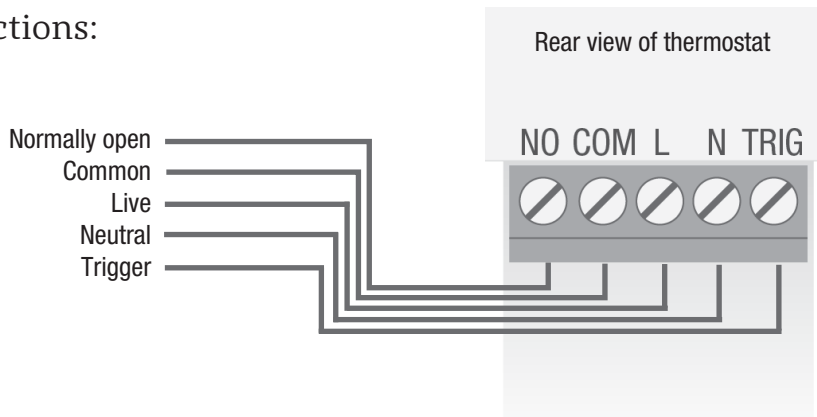

Terminal connections:




## Troubleshooting:

Fault	Checks
No LEDS are lit	<ol style="list-style-type: none"> <li>1. Check the unit is wired as per the wiring section starting on page 3.</li> <li>2. Check the mains supply voltage, ensure that 220-250V AC are present and stable.</li> </ol>
The load does not turn on	<ol style="list-style-type: none"> <li>1. Ensure there is power to the load if not fed by the thermostat, for example a volt free boiler connection.</li> <li>2. Check the unit is wired as per the wiring section starting on page 3.</li> <li>3. Check that the  LED is lit. This LED will only light when the thermostat relay is closed. If the LED is off the relay is open. If the LED is lit the thermostat is calling for heat.</li> <li>4. Check that the current room temperature is not above that of the thermostat set-point. If the room temperature is above the top temperature set-point the thermostat will not close it's relay to heat until the room temperature falls below the set-point.</li> <li>5. If wired in a mains output configuration ensure the mains link has been fitted.</li> </ol>
The load does not turn off	<ol style="list-style-type: none"> <li>1. Check the unit is wired as per the wiring section starting on page 3.</li> <li>2. Check that the  LED is not lit. This LED will only light when the thermostat relay is closed. If the LED is off the relay is open. If the LED is lit the thermostat is calling for heat and therefore the load will not switch off until heating is complete.</li> <li>3. Check that the current room temperature is not below that of the thermostat set-point. If the room temperature is below the top temperature set-point the thermostat will not open it's relay to discontinue heating until the room temperature is raised above that of the set-point.</li> <li>4. If wired in a volt free contact configuration ensure the mains link has been removed.</li> </ol>
Only the blue LED is lit and the buttons do not function	<p>This is normal after first power up. The thermostat stays dormant for 1 minute while the thermostat stabilises. Once this time has elapsed the unit will function as normal.</p>
The load switches off after 2 minutes	<p>The thermostat has a 2 minute test cycle/pre-warm, when the unit is boosted from setback or frost by an up button press, the thermostat will heat regardless of temperature for 2 minutes. Once this time run has elapsed the thermostat will resume temperature sensing. If the load is switching off after this time the temperature set-point is below that of the room temperature meaning there is no need for the load to be on.</p>
The thermostat is always in boost mode	<ol style="list-style-type: none"> <li>1. A voltage is present at the trigger terminal holding the unit in boost mode.</li> <li>2. Foreign substance jamming up button.</li> </ol>
The thermostat does not stay at set level	<ol style="list-style-type: none"> <li>1. The boost run time has elapsed and the thermostat has returned to setback mode.</li> <li>2. A foreign substance is jamming one of the buttons.</li> <li>3. A voltage is present at the trigger terminal changing the program to boost mode, the thermostat will return to setback mode once the voltage is removed.</li> </ol>

### Programming characteristics:

The time and temperature profiles of the unit are factory set to a default setting. However further adjustments can be made on site via the PRE5901 programming handset (Please note the PRE5900 and PRE5903 are not compatible with the ecostat range).

Once the unit has been wired and fitted as per instructed in this manual, power up the unit. The unit will be dormant for 1 minute after initial power up to allow the thermostat to stabilise.

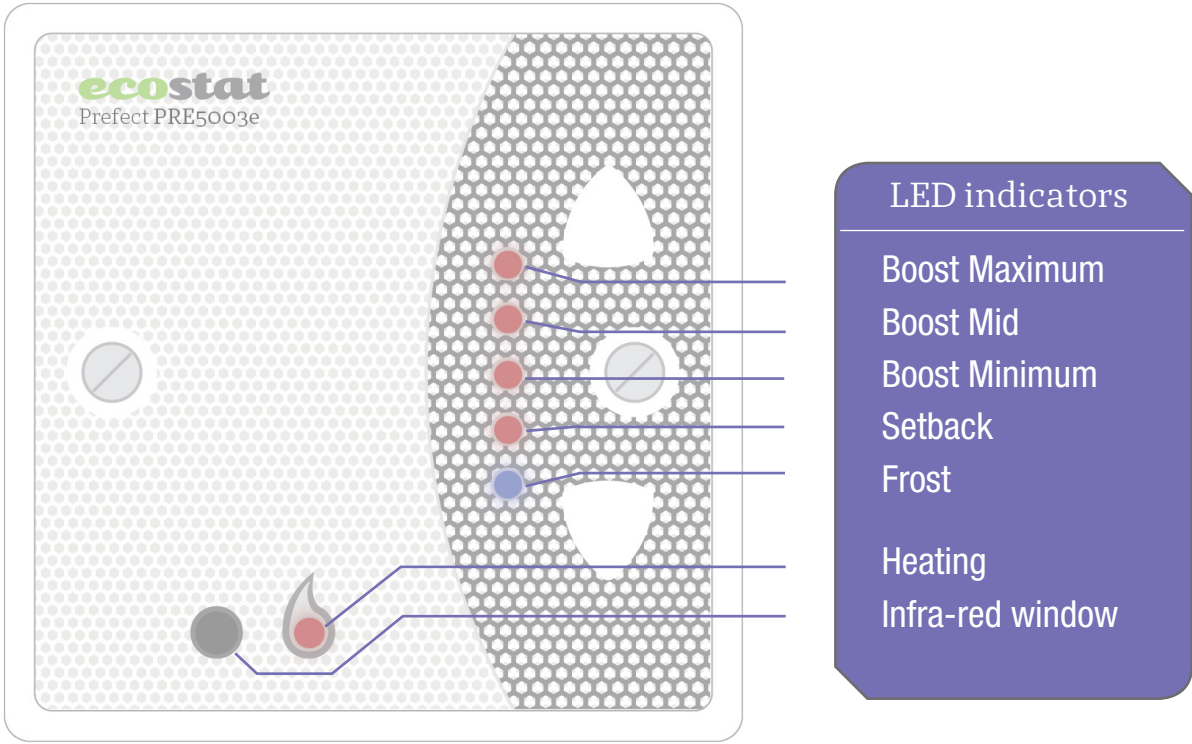

### Program states:

#### BOOST

This mode is typically a relatively short run time, 45 minutes is recommended, with a comfortable room temperature used when the room is occupied. The boost mode is activated either by the up button being pressed or the thermostat receiving a boost trigger voltage from an external time clock.

#### SETBACK

This mode typically uses a medium length run time 12 to 48hrs is recommended. A temperature of 30% less than the boost temperature is recommended, this setting is used for short periods of absence. Setback mode is enabled when the boost run time has elapsed. Setback mode can also be selected with the control buttons, either raising the temperature from frost or cancelling the boost cycle.

#### FROST

This mode is used for long periods of occupant absence. A temperature of 5°C is recommended to protect the fabric of the building.

#### USER ADJUSTMENT

The occupant can adjust the rooms temperature by using the up and down buttons. The occupant can only adjust the temperature level between the preset levels, the maximum setting is the boost temperature and the minimum is frost setting.

#### TEST MODE/PRE -HEAT


When the thermostat is boosted by an up button press, the thermostat will enter boost mode. For the first 2 minutes of the boost cycle temperature sensing is omitted and the thermostat will heat regardless of temperature. After the 2 minutes has elapsed temperature sensing is re-enabled and the thermostat will continue the boost cycle. This cycle can take place only once during a boost cycle and once every hour unless the boost cycle is of more than an hour in which case the cycle can only take place once.

#### 230VAC REMOTE TRIGGER

The thermostat can be remotely triggered into boost mode by applying a 230VAC voltage to the trigger terminal (TRIG) of the thermostat. When the voltage is applied for less than 30 seconds the thermostat will enter boost mode at the minimum level, the thermostat will complete the boost run time. When the voltage is applied for more than 30 seconds the thermostat will stay in boost mode until the trigger voltage is disconnected. Once the trigger has been disconnected the thermostat will immediately enter setback mode and resume the normal program cycle.



### Program characteristics:

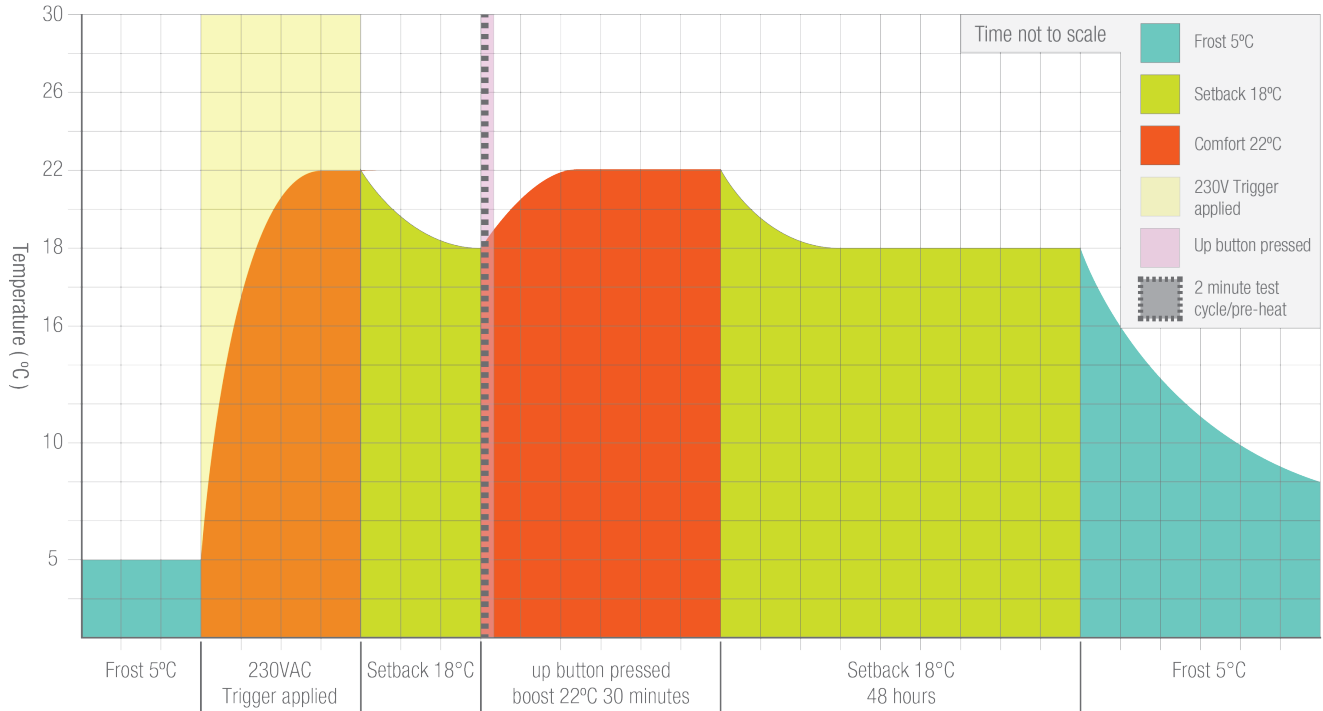

### Programming:

All thermostat parameters are set via the PRE5901 programming handset. Please note that the other Prefect IR handsets are not compatible with the ecostat series. For instructions on how to program the ecostat range and other Prefect infra-red products please see the PRE5901 instructions, available upon request or visit: [www.prefectcontrols.com/our-products/handsets/pre5901/](http://www.prefectcontrols.com/our-products/handsets/pre5901/)

Scan for PRE5901 programming handset instructions



### Programming parameters

Parameter	Value	Description
<b>Temperature</b>		
Frost (°C)	1-30°C	Frost temperature
Setback (°C)	1-30°C	Setback temperature
Boost (°C)	1-30°C	Boost temperature
Setback (hrs)	1-999 Hours	Timer run between boost mode ending and frost mode starting
Boost (mins)	1-999 Minutes	Boost run time. Does not apply when boosted by trigger
Current T (°C)	°C	Current room temperature as read by the thermostat
Setback (mins)	1-59 Minutes	For use when a setback time of less than 1 hour is required
<b>Device Config</b>		
Deep Sleep	Not used	Not used
IR enabled	Yes or No	Disables the infra-red setup from further adjustment without first re-enabling the infra-red. For instance when the infra-red is disabled the thermostat will not accept any settings until infra red is re-enabled. This can also be used for when 2 thermostats are in close proximity and require different settings.
Soft Reset		Restarts the thermostat without altering any stored settings.
Factory Reset	PRE5003	Returns all parameters of the thermostat to default settings, the handset settings are not changed.

