

PRE3208

Mini batten mount PIR



Cleverly simple control of energy.


Wiring diagram page 1 of 1




Avoid direct sunlight entering the sensor. The product is designed to be mounted directly to the outside of the luminaire. The detector should be sited so that occupants fall inside the detection pattern (See product instructions). Do not site within 1 metre of forced heating/cooling ventilation. Note that the lower the sensor is mounted the smaller the detection range will be.

WARNING!


Do not grip the unit at the lens end. Hold the square body near the threaded end when installing and tightening the nut. Care must be taken to prevent damage to the lens and surrounding IP lens seal.

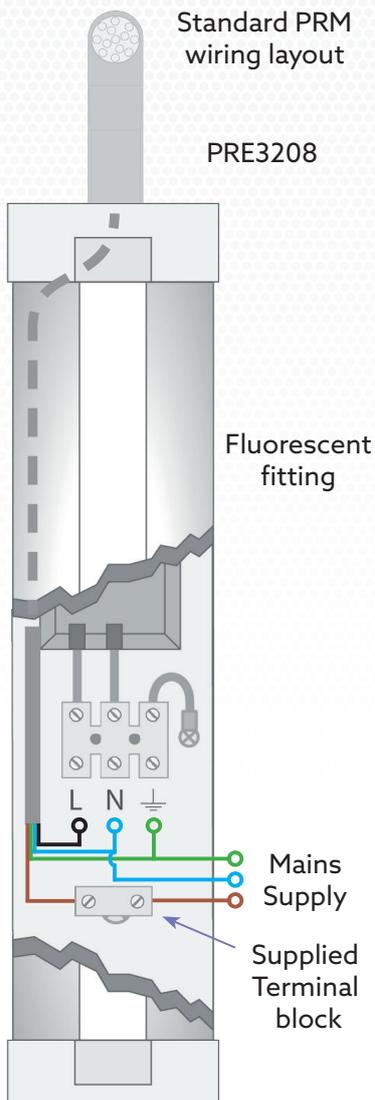


PRE3208-PRM wiring diagram

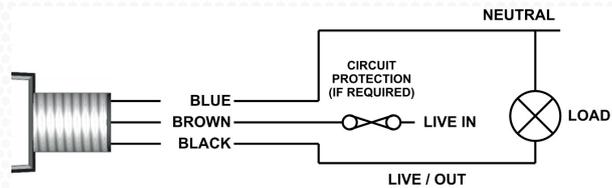

PRE3208-DD wiring diagram

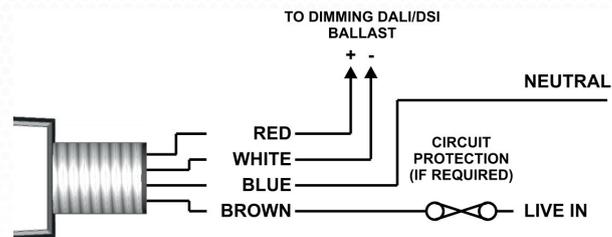

PRE3208-AD wiring diagram

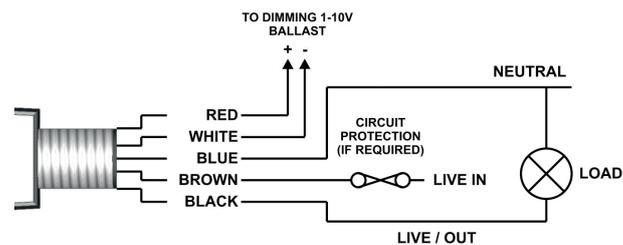

Due to our policy of continuous improvement, we reserve the right to change specifications without notice. All information was correct at time of when this product file was produced - April 2020