



Mount in a surface or sunken pattress box of 25mm or greater. If fitting to a metal back box ensure that top and bottom lugs are removed. Do not over-tighten fixing screws as the button may become jammed. When mounting onto tiling or acrylic splash back or similar, we recommended using transparent silicone sealant around the exterior of the control.

