


Hobsafe PRE9277

Hob run-back timer 40Amp

Wiring diagram page 1 of 2



Cleverly simple
control of energy.

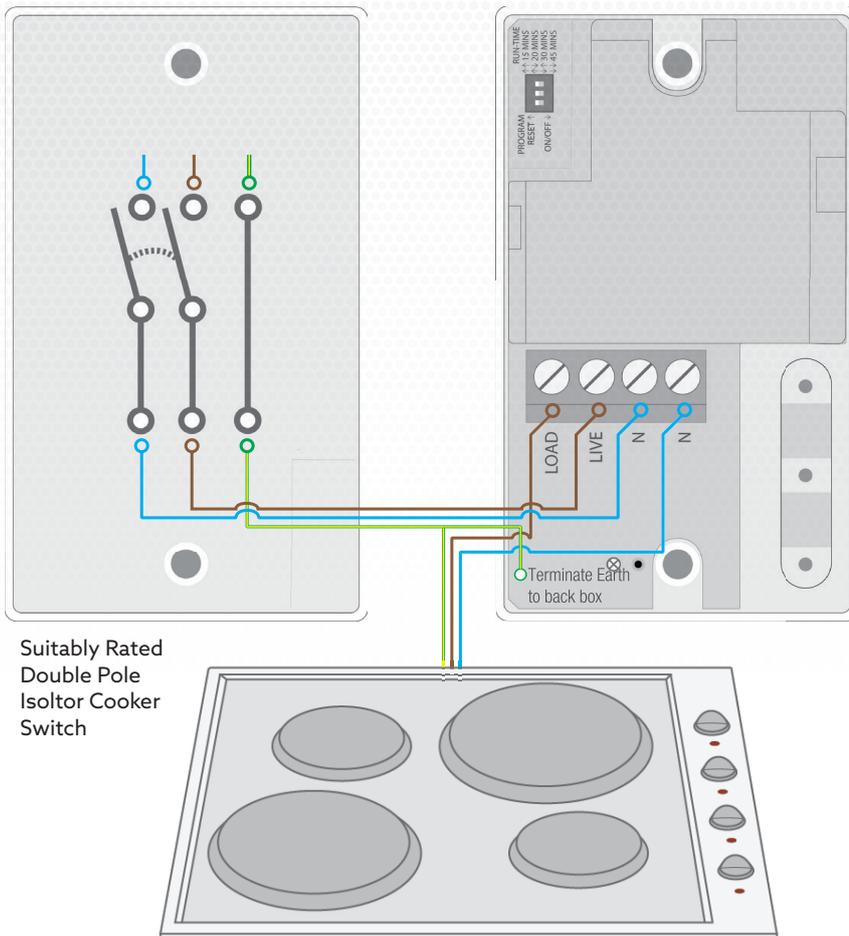

Suitably Rated
Double Pole
Isolator Cooker
Switch

- All installation and wiring works must be completed by a competent person.
- Locate the timer at a minimum distance of 300mm away from the nearest edge of the Hob. Ensure the timer is installed in such a position that it can be safely operated while the hob is in use.
NOTE: The timer is not waterproof. Mount the timer at a safe distance from any liquid sources.
- Ensure the timer has a local means of safe isolation.
- The timer can be mounted in both surface and flush boxes. When mounting into a metal clad back box or flush box ensure any unused lugs are removed.
- Time and program switches should be set before installation into the accessory box.

1. Safely isolate the mains supply to the circuit that the timer is to be installed onto.
2. Terminate the C.P.C to the earthing lug on the accessory box.
3. Terminate the Live and Neutral supply from the isolator to the Live (LIVE) and Neutral (N) terminals of the timer.
4. Terminate the hob supply Neutral to the second Neutral (N) terminal. Connect the hob Live supply to the Load (LOAD) terminal.
5. Ensure all cabling is correctly terminated.
6. Affix the timer to the accessory box. Take care not to damage either the cabling or the timer while tightening the fascia screws. Do not over-tighten the fascia.

Due to our policy of continuous improvement, we reserve the right to change specifications without notice. All information was correct at time of when this product file was produced - April 2020


Hobsafe PRE9277

Hob run-back timer 40Amp

Wiring diagram page 2 of 2



Cleverly simple
control of energy.

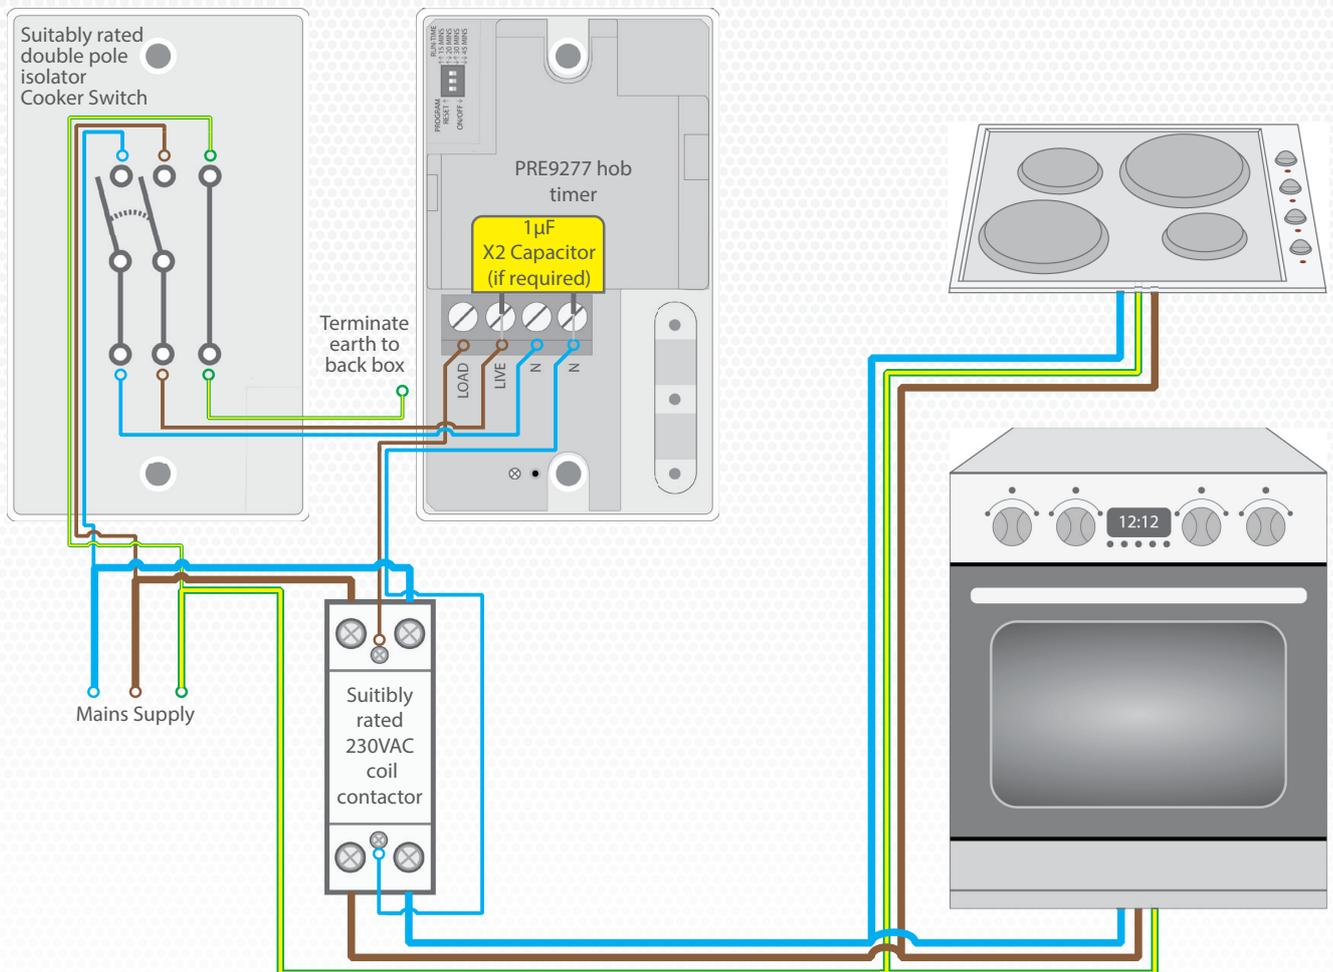

NOTE:

It is possible in some installations that when switching a contactor via PRE9277 you may experience problems with the PRE9277 switching on and off. In this situation it may be necessary to fit a capacitor between the Live and Neutral terminals of the PRE9277.

Please contact Prefect Controls for more details if this problem occurs.

Due to our policy of continuous improvement, we reserve the right to change specifications without notice. All information was correct at time of when this product file was produced - April 2020