


PRE5502ec ecostat Remote Auto-on

3 Stage Infra-red Settable Intelligent Remote Thermostat With Auto-on Feature

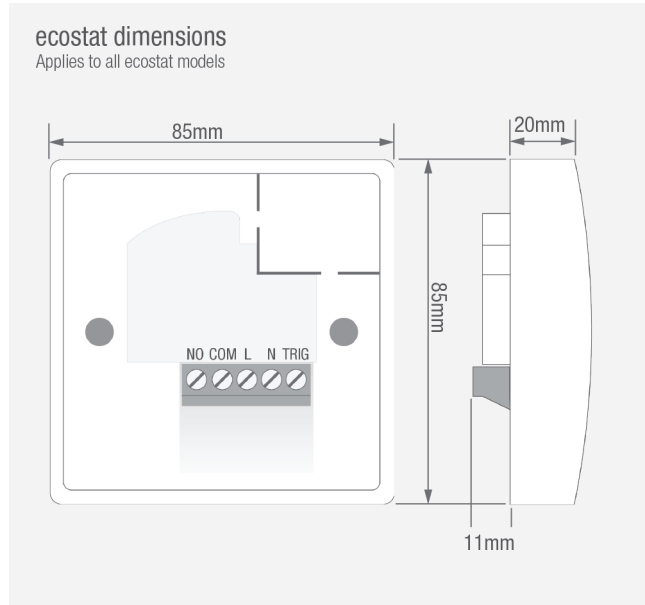

Specification:

SIZE: Standard single gang plate size. Requires a 30mm or larger surface pattress or 25mm or greater sunken box. When mounting into a sunken wall box or metal clad box remove the top and bottom mounting lugs of the box.

SUPPLY VOLTAGE: 220-240V AC at 50Hz.

LOAD: 16A Resistive, not suitable for use with quartz heaters.

ELECTRICAL CONNECTIONS: Live in (L), Neutral (N), Common (C), Normally Open (NO), 230V AC 50Hz Boost Trigger (TRIG).

TERMINAL CAPACITY: 4mm² Maximum

INDICATORS: Heating active, Active, Low

ADJUSTMENT: No user controls

PROGRAMS: Boost, Setback, Frost.

CLOCK EVENTS: Two auto-on events in 24 hours

CLOCK RANGE: 23 hours, 59 minutes

CLOCK CELL: CR2477 3V

CLOCK CELL LIFE EXPECTANCY: Based upon 2 months per year the unit is powered down, 5 Years.

TIMING RANGE: Boost 5-999 minutes, Setback 5 minutes to 999 hours.

TEMPERATURE RANGE: Boost, Setback and Frost

1-30°C.

PROGRAMMING METHOD: AUTO LOCK SYSTEM © Secure Infra-red programming via the PRE5901.

CONFORMANCE: EMC-2004/108/EC LVD-2006/95/EC

ERP CLASS: ErP 1, SHE 1%

CASING MATERIAL: ABS


TEMPERATURE ACCURACY: +/- 0.5°C

Installation:

- All installation and wiring works must be completed by a competent person and conform to current regulations in-force at time of installation.
- Locate the thermostat at least 300mm away from the nearest edge of the heater. Ensure the thermostat is placed where it cannot be affected by extraneous heat sources, for example: Televisions, Desktop computers, fridges. If fitted too close to an extraneous heat source the thermostat will not function correctly. Mount the thermostat at the centre point of the room if possible. Do not mount the thermostat behind curtains or room dividers.
- Ensure the thermostat has a local means of safe isolation. A double pole isolator must be used.
- Mount the thermostat at 1.2m from finished floor level.
- The thermostat can be mounted in both surface and sunken boxes. When mounting into a metal clad pattress or sunken box the upper and lower lugs must be removed.
- Ensure the thermostat is not mounted within 1m of forced heating or ventilation systems.

.....

Typical layout:

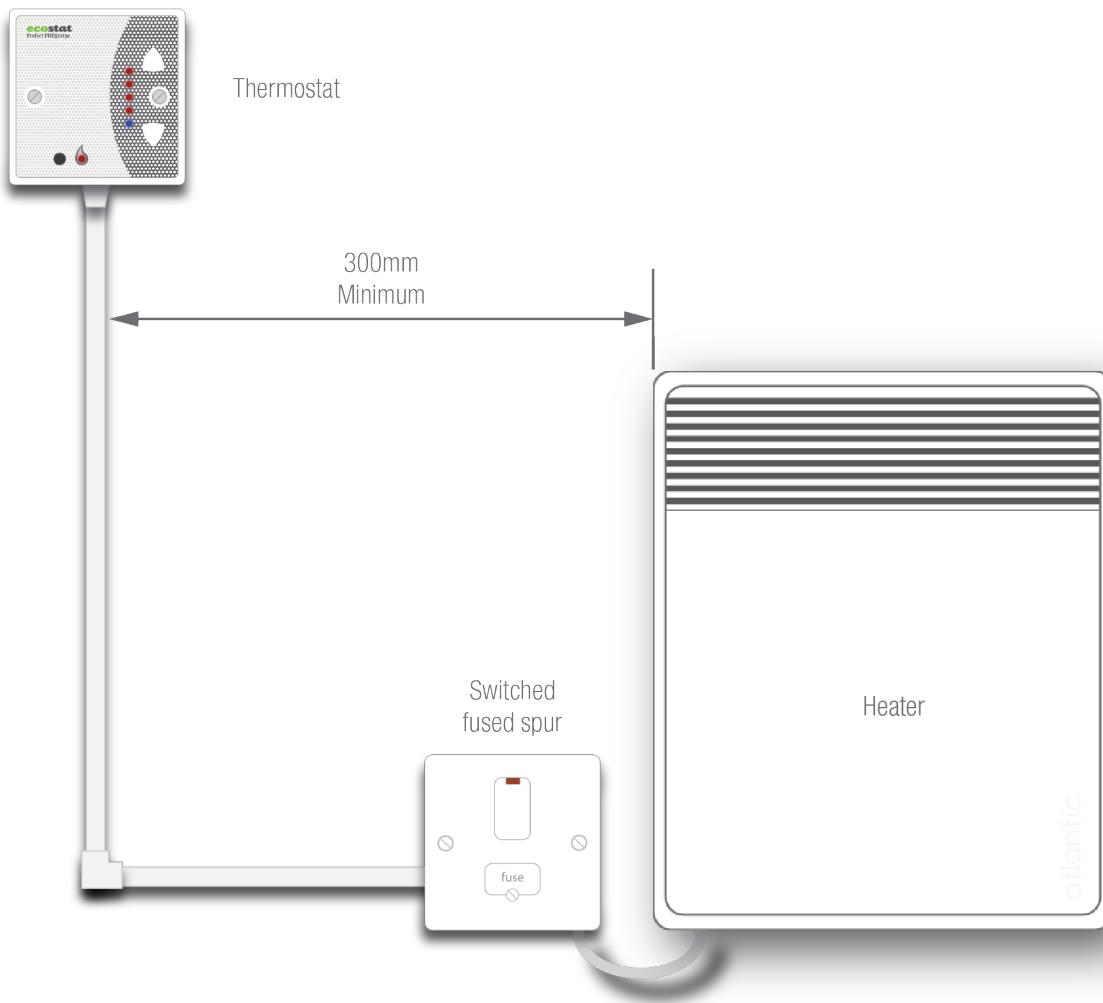


Wiring:

Mains output

1. Isolate the appropriate circuit that the thermostat is to be supplied from. Perform safe isolation procedure to ensure the circuit is completely isolated. Ensure the supply has been locked in the off position. Always ensure safe working practices.
2. Make any circuit adjustments required in accordance with current regulations.
3. If the trigger terminal is to be used ensure the trigger supply is fed from the same circuit as the thermostat supply to conform with current regulations.
4. Connect the live and neutral supply to the thermostat, note that the load neutral must be fitted with the supply neutral. Ensure the supplied mains link is fitted between L and COM terminals, terminate the loads live supply to the normally open (NO) terminal. Ensure the link is securely fastened in both the L and COM terminals.
5. Recheck all terminal including any factory fitted connections and fit unit to back box ensuring cables are not in a position to be damaged.
6. Re-energise the circuit. Press the up button twice to enable a 2 minute test cycle.

Volt free output


1. Isolate the appropriate circuit that the thermostat is to be supplied from. Perform safe isolation procedure to ensure the circuit is completely isolated. Ensure the supply has been locked in the off position. Always ensure safe working practices.
2. Make any circuit adjustments required in accordance with current regulations.
3. If the trigger terminal is to be used ensure the trigger supply is fed from the same circuit as the thermostat supply to conform with current regulations.
4. Terminate the live and neutral supply to the thermostat. Ensure the supplied mains link is removed.
5. Terminate the loads feed cable to the common (COM) terminal. Terminate the load return to normally open (NO) terminal.
6. Recheck all terminal connections and fit unit to back box ensuring cables are not in a position to be damaged.
7. Re-energise the circuit. Press the up button twice to enable a 2 minute test cycle.

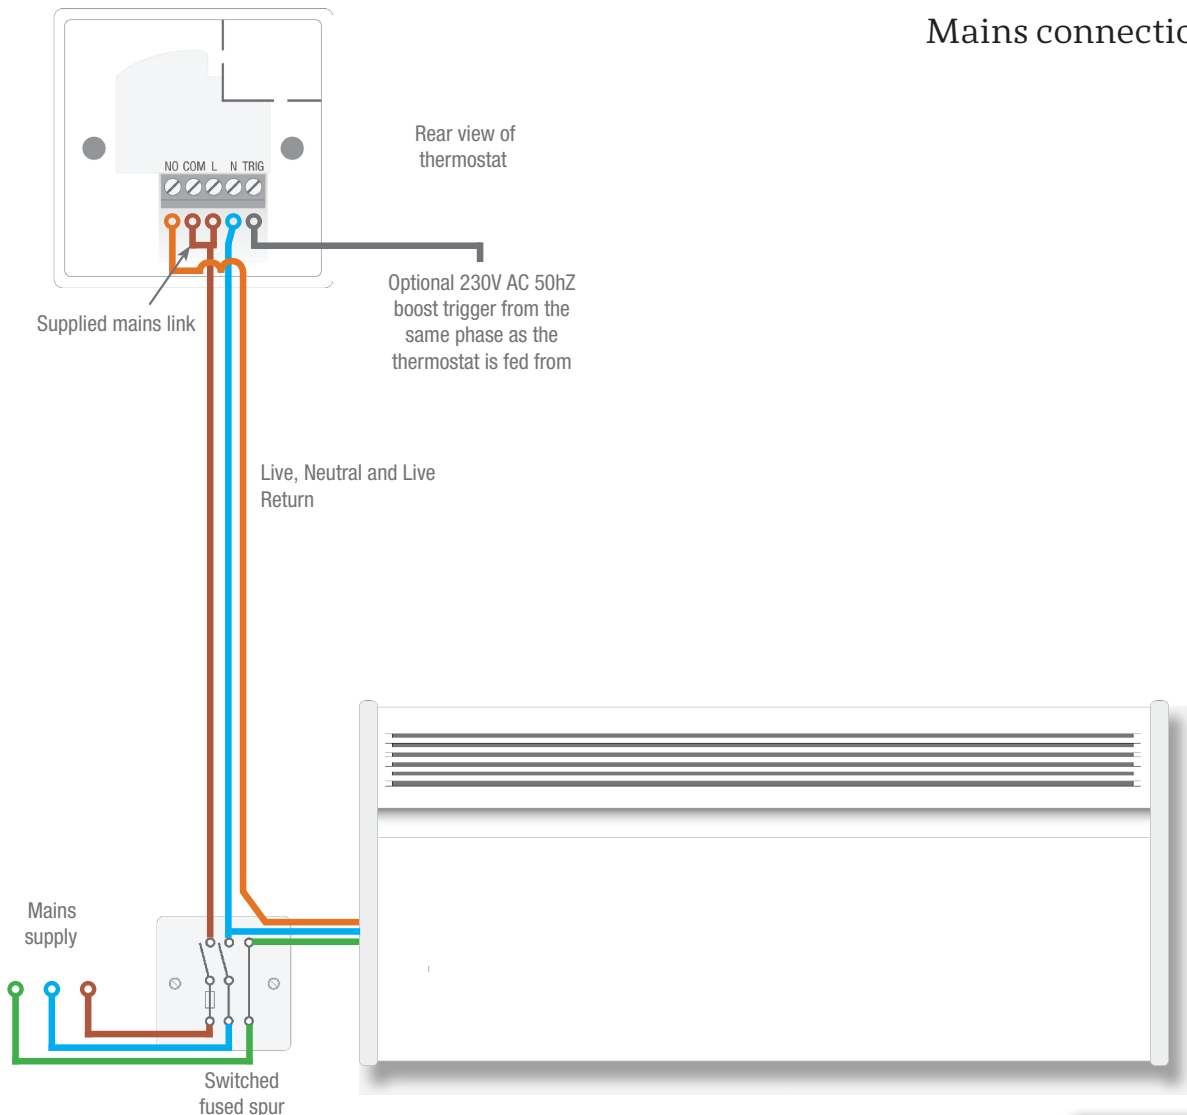


Mains connection



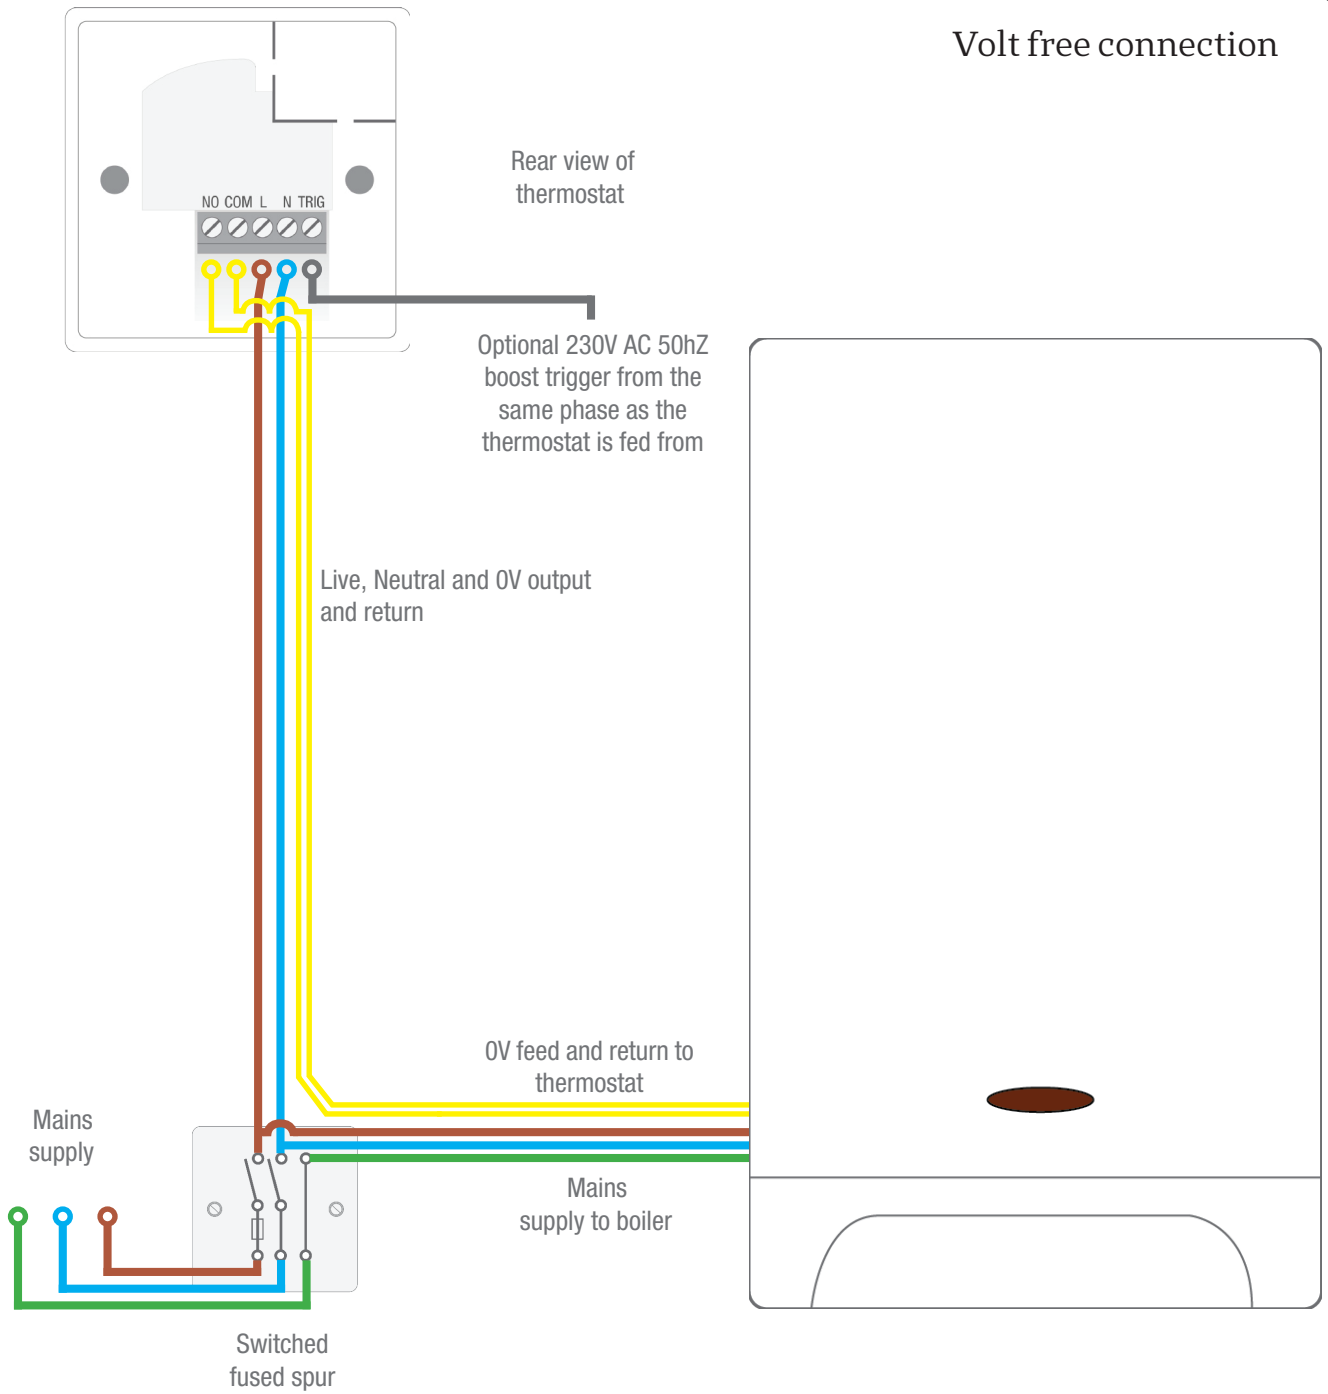

Volt free connection

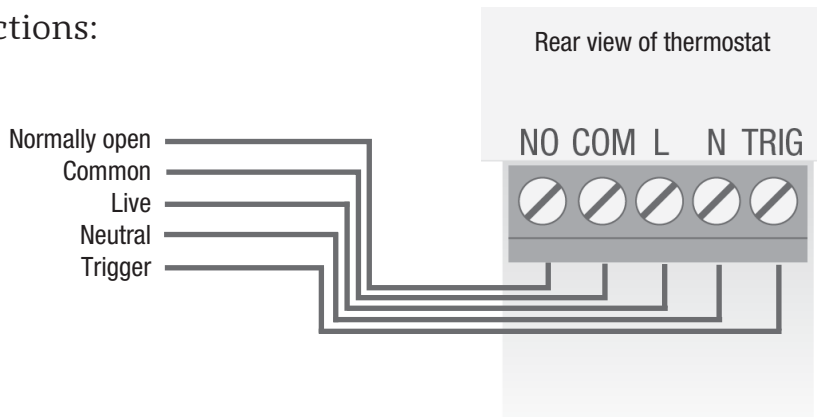

Terminal connections:



Troubleshooting:


Fault	Checks
No LEDS are lit	<ol style="list-style-type: none"> 1. Check the unit is wired as per the wiring section starting on page 3 2. Check the mains supply voltage, ensure that 220-250V AC are present and stable
The load does not turn on	<ol style="list-style-type: none"> 1. Ensure there is power to the load if not fed by the thermostat, for example a volt free boiler connection 2. Check the unit is wired as per the wiring section starting on page 3 3. Check that the  LED is lit. This LED will only light when the thermostat relay is closed. If the LED is off the relay is open. If the LED is lit the thermostat is calling for heat 4. Check that the current room temperature is not above that of the thermostat set-point. If the room temperature is above the top temperature set-point the thermostat will not close it's relay to heat until the room temperature falls below the set-point. 5. If wired in a mains output configuration ensure the mains link has been fitted 6. Ensure the time events have been correctly programmed. Saved programmed events can be read from the thermostat, Please see the PRE5901 handset instructions.
The load does not turn off	<ol style="list-style-type: none"> 1. Check the unit is wired as per the wiring section starting on page 3 2. Check that the  LED is not lit. This LED will only light when the thermostat relay is closed. If the LED is off the relay is open. If the LED is lit the thermostat is calling for heat and therefore the load will not switch off until heating is complete 3. Check that the current room temperature is not below that of the thermostat set-point. If the room temperature is below the top temperature set-point the thermostat will not open it's relay to discontinue heating until the room temperature is raised above that of the set-point 4. If wired in a volt free contact configuration ensure the mains link has been removed. 5. Check that the clock auto-on function has not activated. Programmed auto-on timings can be read using the PRE5901 handset. See PRE5901 instructions for details
Only the blue LED is lit and the buttons do not function	<p>This is normal after first power up. The thermostat stays dormant for 1 minute while the thermostat stabilises. Once this time has elapsed the unit will function as normal.</p>
The thermostat is always in boost mode	<ol style="list-style-type: none"> 1. A voltage is present at the trigger terminal holding the unit in boost mode. 2. Auto-on is active. Programmed auto-on timings can be read using the PRE5901 handset. See PRE5901 instructions for details
The thermostat does not stay at set level	<ol style="list-style-type: none"> 1. The boost run time has elapsed and the thermostat has returned to setback mode 2. A voltage is present at the trigger terminal changing the program to boost mode, the thermostat will return to setback mode once the voltage is removed. 3. Auto-on has activated and the thermostat has triggered into boost mode. Programmed auto-on timings can be read using the PRE5901 handset. See PRE5901 instructions for details



Programming characteristics:

The time and temperature profiles of the unit are factory set to a default setting, however further adjustments can be made on site via the PRE5901 programming handset (Please note the PRE5900 and PRE5903 are not compatible with the ecostat range).

Once the unit has been wired and fitted as per instructed in this manual, power up the unit. The unit will be dormant for 1 minute after initial power up to allow the thermostat to stabilise.

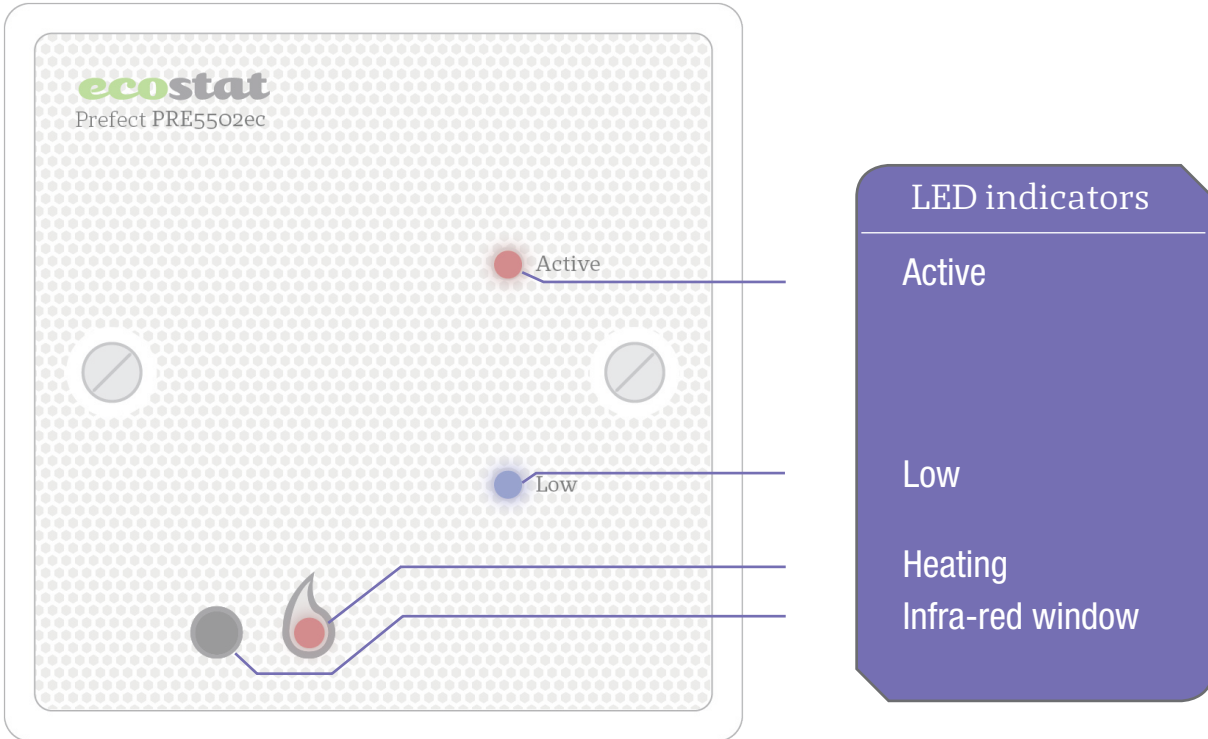

Program states:

BOOST

This mode is typically a relatively short run time, 45 minutes is recommended, with a comfortable room temperature used when the room is occupied. The boost mode is activated by an auto-on event or the thermostat receiving a boost trigger voltage from an external source.

SETBACK

This mode typically uses a medium length run time 12 to 48hrs is recommended. A temperature of 30% less than the boost temperature is recommended, this setting is used for short periods of absence. Setback mode is enabled when the boost run time has elapsed Or the trigger voltage is disconnected.

FROST

This mode is used for long periods of occupant absence. A temperature of 5°C is recommended to protect the fabric of the building.

USER ADJUSTMENT

The room occupants do not have any control of the thermostats preset settings.

TEST MODE/PRE -HEAT

When the thermostat is boosted by an auto-on event, the thermostat will enter boost mode. For the first 2 minutes of the boost cycle temperature sensing is omitted and the thermostat will heat regardless of temperature. After the 2 minutes has elapsed temperature sensing is re-enabled and the thermostat will continue the boost cycle. This cycle can take place only once during a boost cycle and once every hour unless the boost cycle is of more than an hour in which case the cycle can only take place once.




Program characteristics:

230VAC REMOTE TRIGGER

The thermostat can be remotely triggered into boost mode by applying a 230VAC voltage to the trigger terminal (TRIG) of the thermostat. When the voltage is applied for less than 30 seconds the thermostat will enter boost mode at the minimum level, the thermostat will complete the boost run time. When the voltage is applied for more than 30 seconds the thermostat will stay in boost mode until the trigger voltage is disconnected. Once the trigger has been disconnected the thermostat will immediately enter setback mode and resume the normal program cycle.

AUTO-ON

Auto-on will trigger the thermostat into boost mode at 1 or 2 points in a 24hr period. The auto-on feature is programmed using the PRE5901 handset. Please note that the clock must be set during first power up. Clock setup is programmed via the PRE5901 handset (see PRE5901 instructions). Once programmed the thermostat will boost automatically at the set time. Once the thermostats auto-on has triggered the thermostat will run the boost time. The 2 minute pre heat/test cycle does apply to the auto-on cycle.

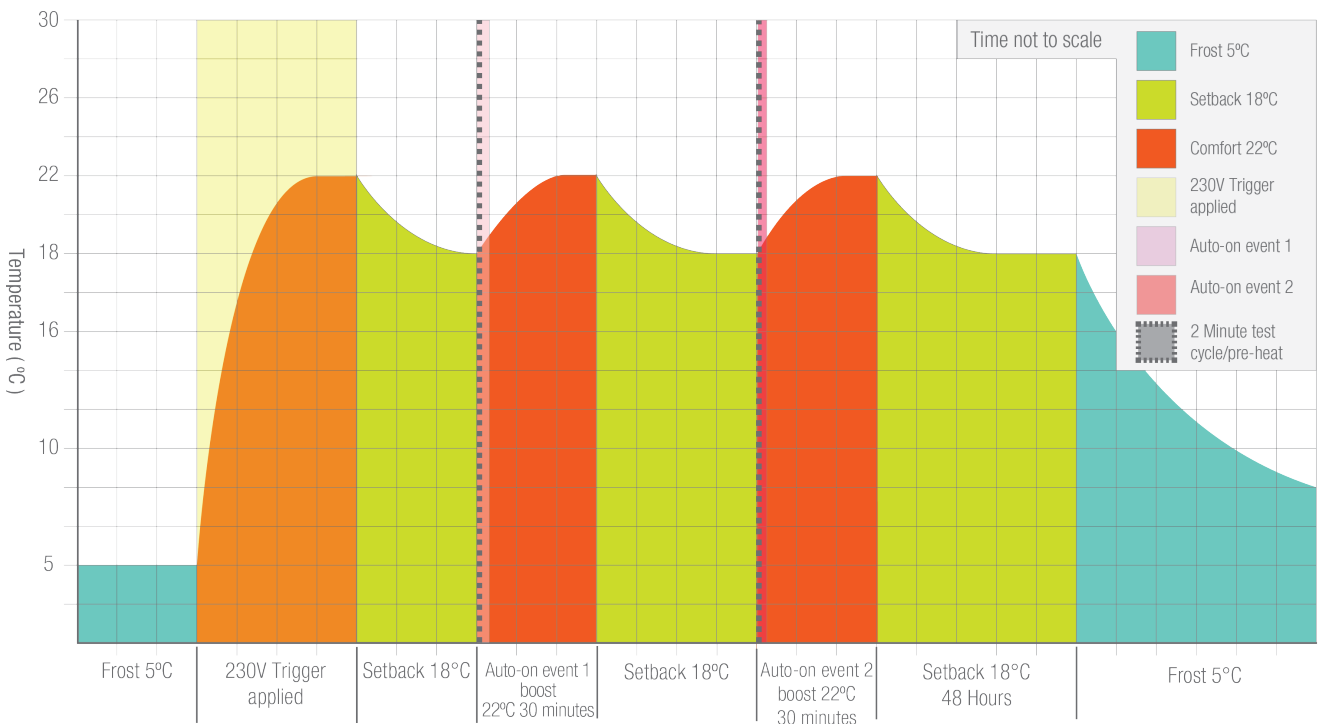

Programming:

All thermostat parameters are set via the PRE5901 programming handset. Please note that the other Prefect IR handsets are not compatible with the ecostat series. For instructions on how to program the ecostat range and other Prefect infra-red products please see the PRE5901 instructions, available upon request or visit: www.prefectcontrols.com/our-products/handsets/pre5901/

Scan for PRE5901 programming handset instructions



Programming parameters:

Parameter	Value	Description
Temperature		
Frost (°C)	1-30°C	Frost temperature.
Setback (°C)	1-30°C	Setback temperature.
Boost (°C)	1-30°C	Boost Temperature.
Setback (hrs)	1-999 Hours	Timer run between boost mode ending and frost mode starting.
Boost (mins)	1-999 Minutes	Boost run time. Does not apply when boosted by trigger.
Current T (°C)	°C	Current room temperature as read by the thermostat.
Setback (mins)	1-59 Minutes	For use when a setback time of less than 1 hour is required.
Events		
Event 1 Hr	Hours	Event activation time 1, hour. Select the hour in the 24 hour period of when the thermostat is required to trigger.
Event 1 Min	Minutes	Event activation time 1, minutes. Select the minutes of the hour of the no. 1 activation time.
Event 2 Hr	Hours	Event activation time 2, hour. Select the hour in the 24 hour period of when the thermostat is required to trigger.
Event 2 Min	Minutes	Event activation time 2, minutes. Select the minutes of the hour of the no. 2 activation time.
Clock		
Current Time Hr	Hours	Input the current time hour, please note the handset does not keep time, the current time must be input into the handset at point of setting the thermostats time.
Current Time Min	Minutes	Input the current time minutes, please note the handset does not keep time, the current time must be input into the handset at point of setting the thermostats time.
Device Config		
Deep Sleep	Not used	Not used.
IR enabled	Yes or No	Disables the infra-red setup from further adjustment without first re-enabling the infra-red. For instance when the infra-red is disabled the thermostat will not accept any settings until infra red is re-enabled. This can also be used for when 2 thermostats are in close proximity and require different settings.
Soft Reset		Restarts the thermostat without altering any stored settings.
Factory Reset	PRE5502	Returns all parameters of the thermostat to default settings, the handset settings are not changed.




Battery cell replacement

The thermostats battery cell is required for operation of the auto-on feature. Once the battery cell has been depleted the auto-on feature will cease to function. However the thermostats other functions will not be affected and will continue to operate as normal. Please note that when the battery cell has been depleted only the current time is lost, all other settings are saved in the thermostats non-volatile memory.

Before undertaking any servicing work on the thermostat it is imperative that the mains supply to the thermostat and any trigger voltages have been safely isolated.


1. Perform safe isolation procedure.
2. Remove the thermostat from the fixing box.
3. Ensure there are no voltages present at any of the terminals.
4. Remove the battery retaining clip by removing the small self-tapping screw, be sure to keep the screw in a safe place.
5. Remove the battery cell and dispose in an appropriate manner.
6. Insert the new battery cell, ensure the battery cell is inserted with the negative pole facing the negative pad on the PCB and the positive pole facing outwards.
7. Insert the retaining clip and replace the self-tapping screw. Do not over tighten the fixing screw.
8. Ensure no conductors have been displaced during works.
9. Fit the thermostat back into it's fixing box.
10. Re-energise the supply circuit and any trigger circuits.
11. Check the thermostat is functioning correctly.
12. Using the PRE5901 programming handset, input the current time.

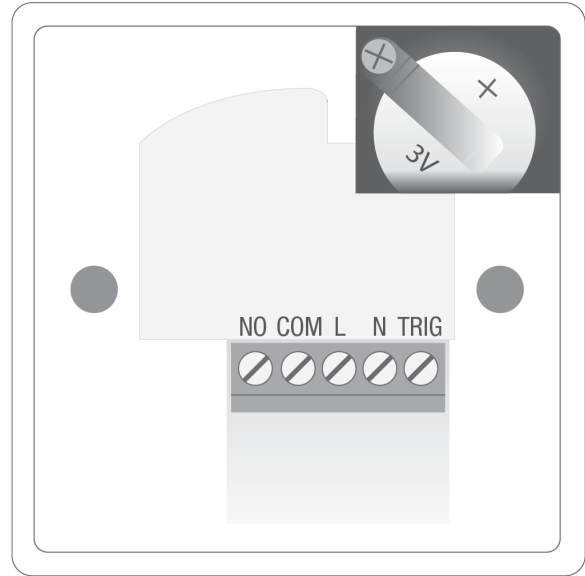

Rear of thermostat

Battery cell fitted

- Battery cell
- Retaining Clip
- Self-tapping screw

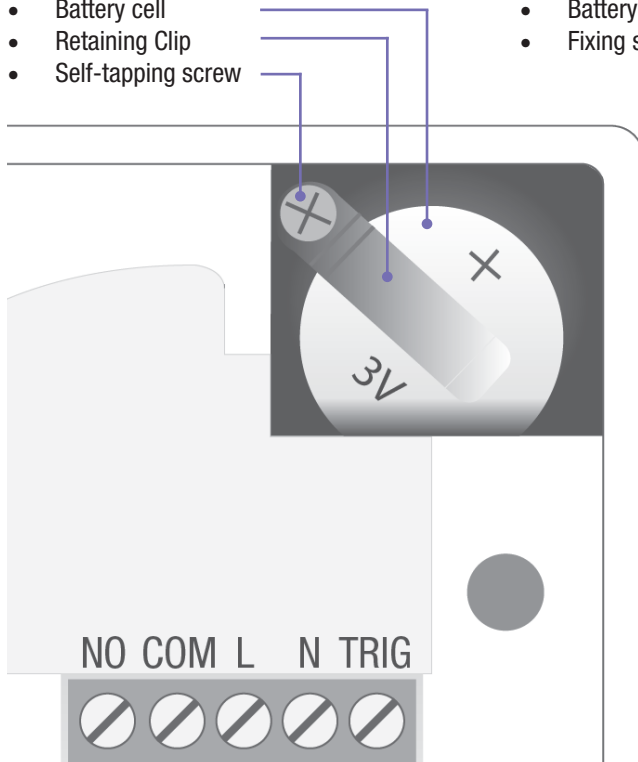

Battery cell removed

- Battery cell negative (-) pad
- Fixing screw mounting hole

